

**VIKING**

# TECHNICAL Practice

**TELECOM SOLUTIONS FOR THE 21ST CENTURY**

**ES-3**

**Entry System  
Door Controller**

July 16, 2003

## Add Up To 32 Access Entry Points To Vikings Accessible Entry System



Up to 32 additional points of entry can be added to **Viking's** model **AES-2000** Accessible Entry System by adding the optional **AES-NET** board. One **ES-3**, one Wiegand device and a door strike or magnetic lock of your choice is required for each additional entry point.

The **ES-3** is an entry system door controller designed to operate a door strike or magnetic lock upon receiving a valid card read from a Wiegand device. The Wiegand device used may be the **Viking** model **HID-1** Proximity Card Reader or any other card reader, RF transmitter or digital keypad that outputs the 26 bit Wiegand format. Up to 525 valid Wiegand codes can be programmed into the **AES-2000**, and up to

1024 access entry events are logged and stored in the **AES-2000**. Other programmable parameters, like relay activation and delay times, are also PC programmed via the **AES-2000**.

Only one pair of wires are needed to wire all 32 Entry System Door Controllers back to the **AES-2000**. This two wire CAN communication protocol allows the **ES-3** to be installed up to 1 mile away. Power to the **ES-3** can also be daisy chained from unit to unit on a single pair of wires, or simply tap into the local door strike's power supply. A door sensor input monitors for a forced door or door ajar condition. A Request to Exit input operates the doors for people leaving the controlled area. Three separate relay outputs allow control of Door Strikes, Magnetic Locks, Gate Opener, Lights, Camera and or Alarm.

## Features

- Up to 525 tenants
- Up to 32 entry points are possible
- logs up to 1024 entry events
- Two wire CAN communication protocol can be daisy-chained together
- Share with door strike's 12-24 Volt AC or DC power source
- Inputs may be either normally open (NO) or normally closed (NC) contacts
- Relay outputs provide either normally open (NO) or normally closed (NC) contacts

**Phone... 715.386.8861**

**<http://www.vikingelectronics.com>**

## Applications

- High rise apartment buildings
- Condos
- Senior citizen buildings
- Assisted care centers
- Retirement homes
- Gated communities

**[info@vikingelectronics.com](mailto:info@vikingelectronics.com)**

## Specifications

**Power:** Any 12-24 Volt AC or DC source @ 300mA (not included)  
(Designed to share power with the local door strike's power supply)

**Dimensions:** 133mm x 89mm x 44mm (5.25" x 3.5" x 1.75")

**Shipping Weight:** 1.3 kg (3 lbs)

**Environmental:** 0° C to 32° C (32° F to 90° F) with 5% to 95% non-condensing humidity

**Relay Contact Ratings:** 3A @ 30V DC/250V AC maximum

**Connections:** 18 screw terminals

**Max CAN Length:** 0.8 Km (2600 ft) - 24 AWG twisted pair, 1.6 Km, (5300 ft) - using 2 pairs of 24 AWG twisted pair

**Max Wiegand Length:** 183 m (500 ft) - 24 AWG

# Warranty

---

## IF YOU HAVE A PROBLEM WITH A VIKING PRODUCT PLEASE CONTACT: VIKING TECHNICAL SUPPORT AT (715) 386-8666

Our Technical Support Department is available for assistance Monday 8am - 4pm and Tuesday to Friday 8am - 5pm central standard time. So that we can give you better service, before you call please:

1. Know the model number, the serial number and what software version you have (see serial label).
2. Have your Technical Practice in front of you.
3. It is best if you are on site.

### RETURNING PRODUCT FOR REPAIR

The following procedure is for equipment that needs repair:

1. Customer must contact Viking's Technical Support Department at 715-386-8666 to obtain a Return Authorization (RA) number. The customer MUST have a complete description of the problem, with all pertinent information regarding the defect, such as options set, conditions, symptoms, methods to duplicate problem, frequency of failure, etc.
2. Packing: Return equipment in original box or in proper packing so that damage will not occur while in transit. Static sensitive equipment such as a circuit board should be in an anti-static bag, sandwiched between foam and individually boxed. All equipment should be wrapped to avoid packing material lodging in or sticking to the equipment. Include ALL parts of the equipment. C.O.D. or freight collect shipments cannot be accepted. Ship cartons prepaid to: **Viking Electronics, 1531 Industrial Street, Hudson, WI 54016**
3. Return shipping address: Be sure to include your return shipping address inside the box. We cannot ship to a P.O. Box.
4. RA number on carton: In large printing, write the R.A. number on the outside of each carton being returned.

### RETURNING PRODUCT FOR EXCHANGE

The following procedure is for equipment that has failed out-of-box (within 10 days of purchase):

1. Customer must contact Viking's Technical Support at 715-386-8666 to determine possible causes for the problem. The customer MUST be able to step through recommended tests for diagnosis.
2. If the Technical Support Product Specialist determines that the equipment is defective based on the customer's input and troubleshooting, a Return Authorization (R.A.) number will be issued. This number is valid for fourteen (14) calendar days from the date of issue.
3. After obtaining the R.A. number, return the approved equipment to your distributor, referencing the R.A. number. Your distributor will then replace the product over the counter at no charge. The distributor will then return the product to Viking using the same R.A. number.
4. **The distributor will NOT exchange this product without first obtaining the R.A. number from you. If you haven't followed the steps listed in 1, 2 and 3, be aware that you will have to pay a restocking charge.**

## WARRANTY

Viking warrants its products to be free from defects in the workmanship or materials, under normal use and service, for a period of one year from the date of purchase from any authorized Viking distributor or 18 months from the date manufactured, whichever is greater. If at any time during the warranty period, the product is deemed defective or malfunctions, return the product to Viking Electronics, Inc., 1531 Industrial Street, Hudson, WI., 54016. Customer must contact Viking's Technical Support Department at 715-386-8666 to obtain a Return Authorization (R.A.) number.

This warranty does not cover any damage to the product due to lightning, over voltage, under voltage, accident, misuse, abuse, negligence or any damage caused by use of the product by the purchaser or others.

Viking's sole responsibility shall be to repair or replace (at Viking's option) the material within the terms stated above. VIKING SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND INCLUDING INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING DIRECTLY OR INDIRECTLY FROM ANY BREACH OF ANY WARRANTY EXPRESSED OR IMPLIED, OR FOR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY EXCLUDED BEYOND THE ONE YEAR DURATION OF THIS WARRANTY. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

## Definitions

---

**CAN Communications:** A highly reliable two wire communication protocol originally developed for the automotive industry.

**Entry Point:** A door or gate allowing access into a secure or controlled area.


**Forced Door Condition:** The door sensor input shows that the door has opened, without the **ES-3** allowing for access.

**Door is Ajar Condition:** The door sensor input shows that the door remained open longer than a programmed amount of time.

**26 bit Wiegand Format:** The industry standard data output protocol of access control card readers.

# Installation

## A. Basic Connections

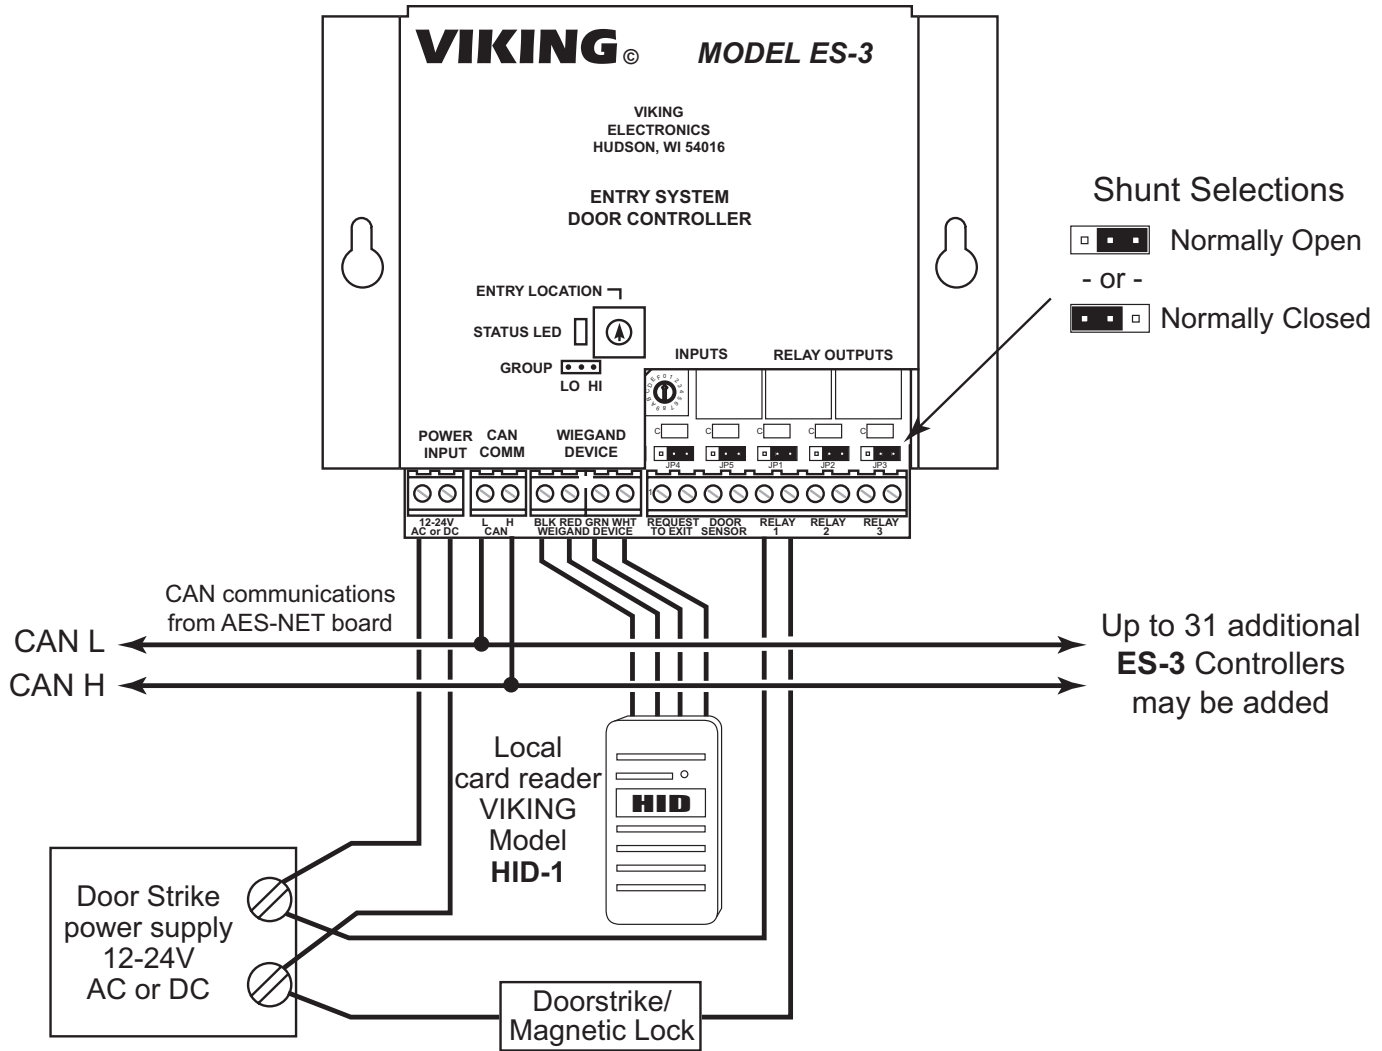


A basic door access controlled entry point is wired as shown above. The **ES-3** may share power with the attached door strike or magnetic lock if the Voltage is between 12-24 Volts and an additional 300 mA of current is available.

Relays can be set as either Normally Open (NO), or Normally Closed (NC) using the shunt located directly behind the relay screw terminals.

The Wiegand device (typically a proximity card reader) is fully supported (power and data) from the **ES-3** and can be installed up to 500 feet away using 24 gauge wire.

The **ES-3** communicates with the **AES-2000** through the **AES-NET** board via a two wire CAN Communication Bus. CAN bus distances of up to 1/2 a mile (over 2600 feet) are achieved using common 24 gauge CAT-2 through CAT-5 wire, and 1 mile (5280 feet) is possible by doubling up on the 24 gauge twisted pair (or running at least 21 gauge). In addition, up to 32 **ES-3** entry system door controllers may share the same CAN communication pair.

## B. Advanced Features

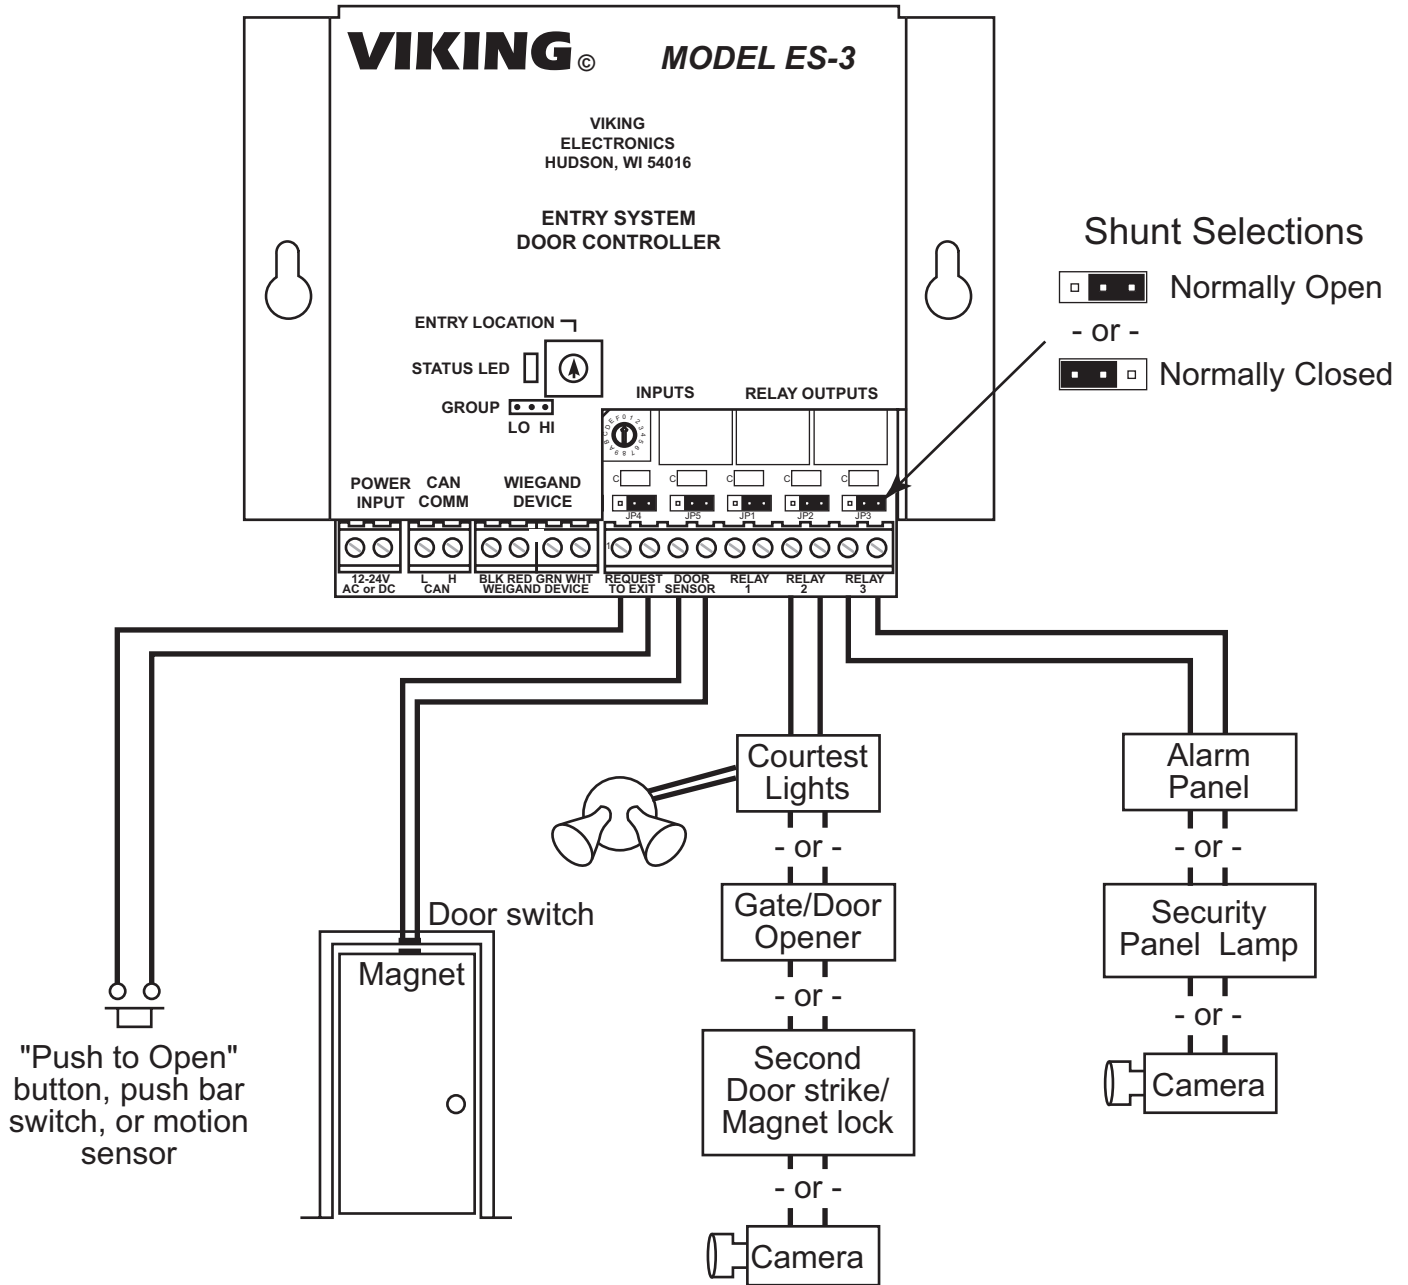

The **ES-3** can be wired with either a normally open or a normally closed Door Sensor switch by setting the shunt located directly behind the Door Sensor screw terminals to either Normally Open (NO), or Normally Closed (NC).

The **ES-3** can be wired with either a normally open or a normally closed Request to Exit device switch by setting the shunt located directly behind the Request to Exit screw terminals to either Normally Open (NO), or Normally Closed (NC).

Relay 2 can provide either a Normally Open (NO), or Normally Closed (NC) contacts to control a courtesy light, a gate/door opener, a second door strike/magnetic lock, or start a camera. Use the shunt located directly behind the relay screw terminals to set the normal state.

Relay 3 can provide either a Normally Open (NO), or Normally Closed (NC) contacts to trigger an alarm, activate a security panel lamp, or start a camera. Use the shunt located directly behind the relay screw terminals to set the normal state.

# Programming

## A. Assignment

Each **ES-3** (up to 32 total) must be assigned with its own unique entry point location identifier. With the shunt set to Low Group, 16 different rotary switch positions are available. After these 16 have been used, set the remaining units to the High Group for 16 more settings using the same rotary switch.

**IMPORTANT: Do NOT set group shunts and rotary switches until the entire system is wired and powered up.**

If an **ES-3** is installed with a duplicate entry point location identifier, the Status LED will flash. Simply move the shunt/rotary switch to a new position. The Status LED will momentarily go off, then come on steady to show it has its own unique entry point location identifier.

## B. ES-3

Each **ES-3** and all valid card numbers must be programmed in the system for proper operation. This programming is done through the telephone line interface of the **AES-2000** using the **PB-100** with special software. This allows either remote programming from a distant location, or local programming using the Viking **DLE-300** line simulator. The **PB-100** is connected to a serial port of a P.C. and Windows based software is used to enter relay activation times and alarm conditions for each **ES-3** and the valid card numbers in the **AES-2000** data base.

Access the Remote Programmer software as described in the **AES-2000** Technical Practice. Proceed through the "Building Selection", "Apartment Selection", and "Security Code" screens until the "Data Transmit" screen appears. Then click the "Entry Points" button and the "Entry Point Quick Programming" screen will appear as shown to the right. To start, select whether the **ES-3** to be programmed is a low or high group (shunt selectable), enter the rotary switch position, and click "Get Status".

If a "Network Error" is given, check that the Group Shunt and Rotary Switch assignment match an actual installed **ES-3**, the **ES-3** being programmed is powered up, and the CAN bus connections are polarity correct (H & L). When all is OK, the existing parameters such as Facility Code (see Access Cards section C below), relay activation times and alarm conditions will appear. New values may be entered and applied, or click the "Guide" button to walk through detailed programming instructions in the software itself.

After one **ES-3** is programmed, select the next **ES-3** to be programmed and continue until all entry points have been programmed.

Entry Point Quick Programming

File Help

Entry Point

Low Group  High Group  Rotary Switch

Shown are the existing settings for this Entry Point. You may either change then apply new values for these settings or walk through the programming guide to set up this Entry Point.

Facility Codes accepted at this Entry Point  
Note: Leave all entries '0' to allow any or all facility codes

Relay 1 (Door Strike) Activation Time  Seconds

Relay 2 Delay Time (After Relay 1 Activate)  Seconds

Relay 2 Activation Time  Seconds

Door Ajar Delay Time  Seconds

Relay 3 (Alarm) Activation Time  1 Second  Continuous

Forced Door Entry Alarm  Enabled

## C. Access Cards

26 bit Wiegand Access Cards, such as the HID Proximity Card, identify themselves with an eight digit number. The first three digits are considered the Facility Code and are programmed into the **ES-3**. The last five digits are the Internal Card Number and are programmed into the **AES-2000** as the "Keyless Entry Code" for the person the card will be issued.

For example: If the facility code is **477** and the Internal Card Number is **00023**, then program **477** as one of the Facility Codes in each **ES-3** entry point to be used. The Internal Card Number "**00023**" must be programmed in to **AES-2000** as the Keyless Entry Code for the given apartment. (See Programming Section in the **AES-2000** Technical Practice).

## D. Creating Zones

Each **ES-3** entry point can be programmed to accept up to 8 different Facility Codes. In this manner, different groups of users can be issued access cards with different Facility Codes to create entry points in which some groups are allowed access, and/or other groups are not. This open form of creating "Zones" means each Entry Point can be its own unique zone.

*NOTE: If all Facility Codes are left set to "0", the entry point will disregard the Facility Code all together, thus making access entry based only on a Card Number match from the Keyless Code programmed in the **AES-2000**.*

# Operation

---

The **ES-3** Entry System Access Controller monitors the Wiegand device (ie. proximity card reader) for 26 bit Wiegand data. When data is received, it is converted into CAN data and sent (up to 1 mile away) to the **AES-NET** board through the shared CAN two wire pair. The **AES-2000** compares the data against its programmed data base and communicates back to the originating **ES-3** whether access is granted or not. If access is granted, Relay 1 and Relay 2 will activate per their programmed delay and activation times. The Entry Point Location, time, and Card Number will all be logged in the **AES-2000**. Relay 1 operates first and should be used to operate the door strike or magnetic lock. Relay 2 can be delayed from Relay 1 to operate a gate / door opener, or a second door strike or magnetic lock for double entrance doors. Relay 2 may also be programmed with longer times to operate courtesy lights or a camera.

If a "Push to Open" button, push bar switch, or motion sensor activates the Request to Exit input of the **ES-3**, the relays will activate the same as if access is granted. No data is logged on a Request to Exit event.

If a door sensor switch is wired to the Door Sensor input of the **ES-3** and the door remains open longer than the programmed Door is Ajar timer, Relay 3 will activate for either 1 second or until the door closes (programmable). This can be used to set an alarm, light a security panel lamp, turn on a camera, etc.

If both a request to exit device and a door sensor switch are used, a Forced Door alarm condition may be selected. If the door is opened other than by the **ES-3**, Relay 3 will activate for either 1 second or until the door closes (programmable).

LED's are provided for the 2 inputs and the 3 relay outputs. Each LED is located behind its associated screw terminals. The LEDs will remain off showing the idle state, and turn on when its associated input/output is triggered/activated.

**Product Support Line...715.386.8666**

**Fax Back Line...715.386.4345**

Due to the dynamic nature of the product design, the information contained in this document is subject to change without notice. Viking Electronics, and its affiliates and/or subsidiaries assume no responsibility for errors and omissions contained in this information. Revisions of this document or new editions of it may be issued to incorporate such changes.